

RV MOUNT INSTALLATION PROCEDURE ©

1) Place closed boat on floor. Slip smaller, one piece RV mount thru bow (front). The 2 holes should be "under" boat. Slide this mount toward the center of boat as far as it will go (this placement is very important). Boat should be installed with open end (two tubes facing down) as shown.

2) Place the open, larger (2 piece) "U-Shaped" RV Mount (with the two holes) at rear and underneath boat. Place the straight piece with angled stop on the top of the open mount so you can move 2 piece mount freely. **Now, move this 2 piece mount towards the front of the boat until the rear of the boat is less than 1/2" from the inside surface of the angled stop (this is critical).** Attach this mount to the boat by connecting the bottom of the straight piece with the angled stop to the RV Mount. If necessary, press down on this area of the hull to allow you to secure the two pieces of the mount together. Insert a nail or pin thru the hole in the hasp to keep it closed, temporarily.

3) Place closed boat (with RV Mounts still firmly attached) against side or top of recreational vehicle. The rear end of boat **should be at the rear of your RV.** **WARNING! Never cover a heat or exhaust vent!** Boat may be installed at an angle to avoid these vents or windows. Mark position of RV mounts on vehicle with a pencil. (If there are no studs, make sure you install a wide backup plate or heavy washer on the inside wall of your RV to help spread the weight and the "pull" of the bolt). Now, take down the boat and install the RV mounts at their proper locations. (To prevent the possibility of the hull rubbing against the side of your RV you can insert a piece of wood as a spacer between the RV Mount and the side of your RV). Use the correct size nuts, bolts, and washers to suit the thickness of the wall or roof of your RV. **Roof installation?** Use a good waterproofing sealant. If there is room for attachment underneath your RV, this is a third option if no other space is available.

4) After RV Mounts have been installed, slip bow (front) of boat thru smaller, closed mount as far as it will go. Now press rear side of boat into open RV Mount. Close RV Mount with straight piece and angled stop. Lock with a good, "heavy duty" padlock.

5) To remove boat from RV Mount, push in at bottom of boat at rear to release pressure from hasp. Remove straight piece and pull boat out and away from side of vehicle to prevent scratching).

1292RV_MOUNT.INS

