



Porta-SunShade® Set-up

Parts list: Canopy; 3 curved metal tubes 5 feet long; 2 sets of 3 support legs bolted together and riveted to gunnel clips; 2 white, nylon straps each with a snap hook and split ring; 2 Bungee cords each with a snap hook and pair of split rings.

Tools needed: None.

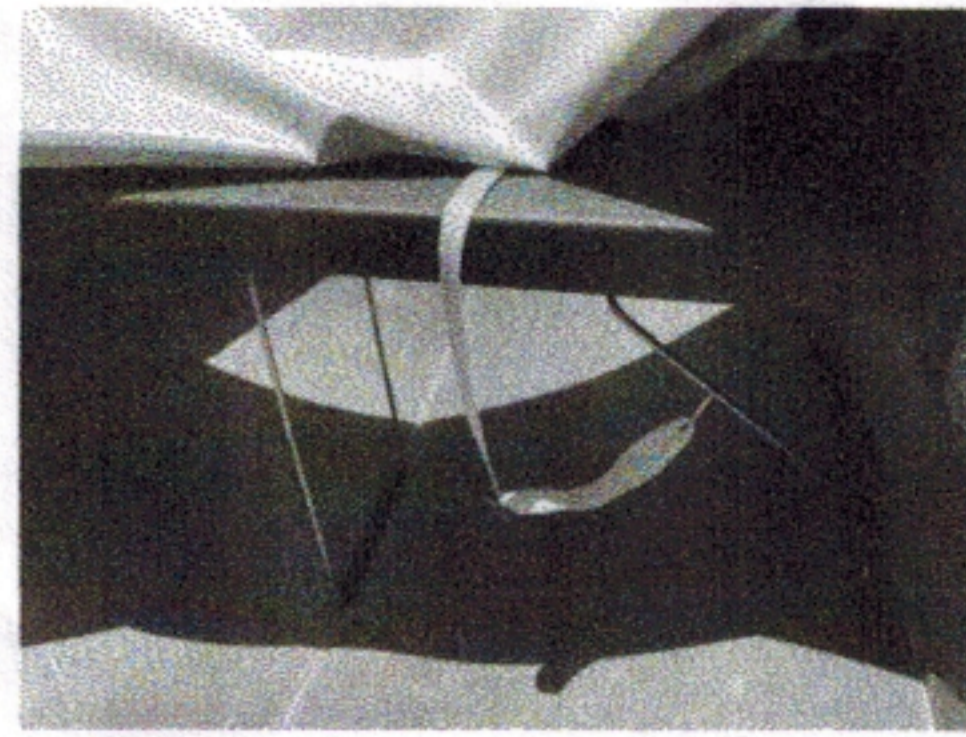


On a 12' boat, snap the white strap to the front seat's outer, rear leg. (On other sized boats hook to the front leg of a seat.)

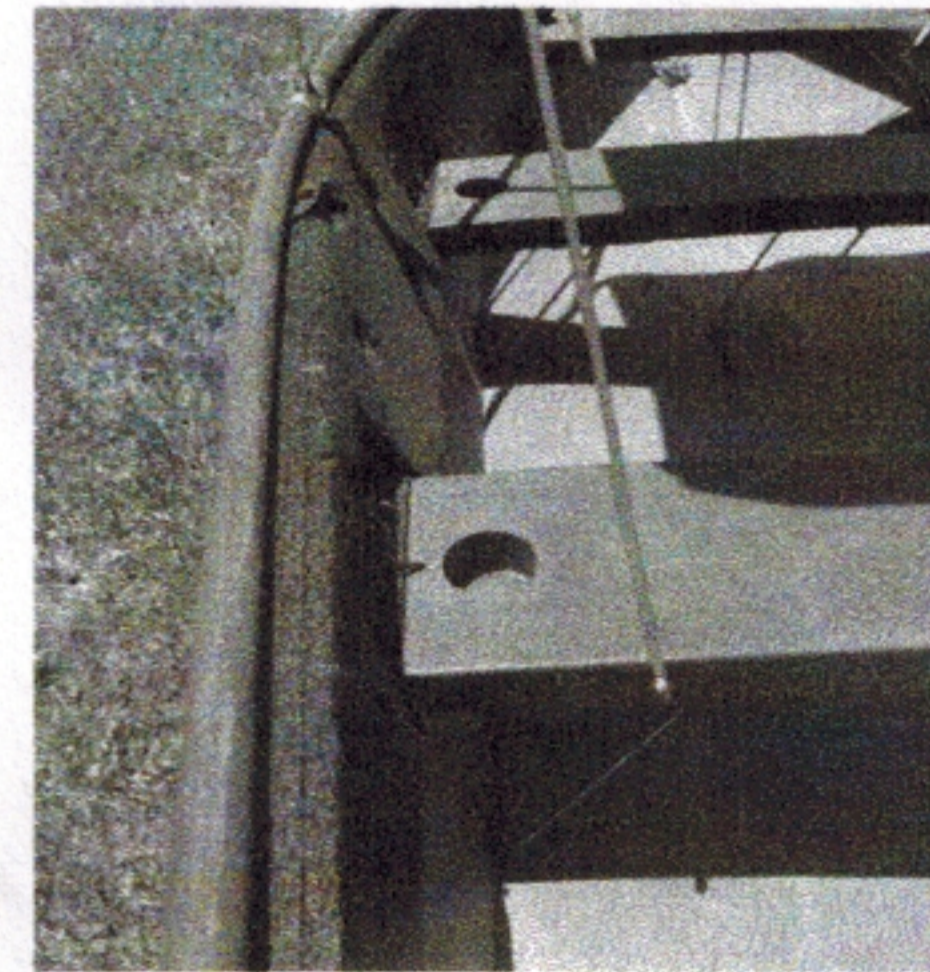


Open the canopy by swinging it up and backwards. Snap the Bungee cord to the back seat's leg.

IMPORTANT: If the SunShade is lowered down onto the gunnels of the boat, tie down the SunShade so that wind or waves do not cause it to fly up unexpectedly. Such opening may cause injury or may push a person over board.

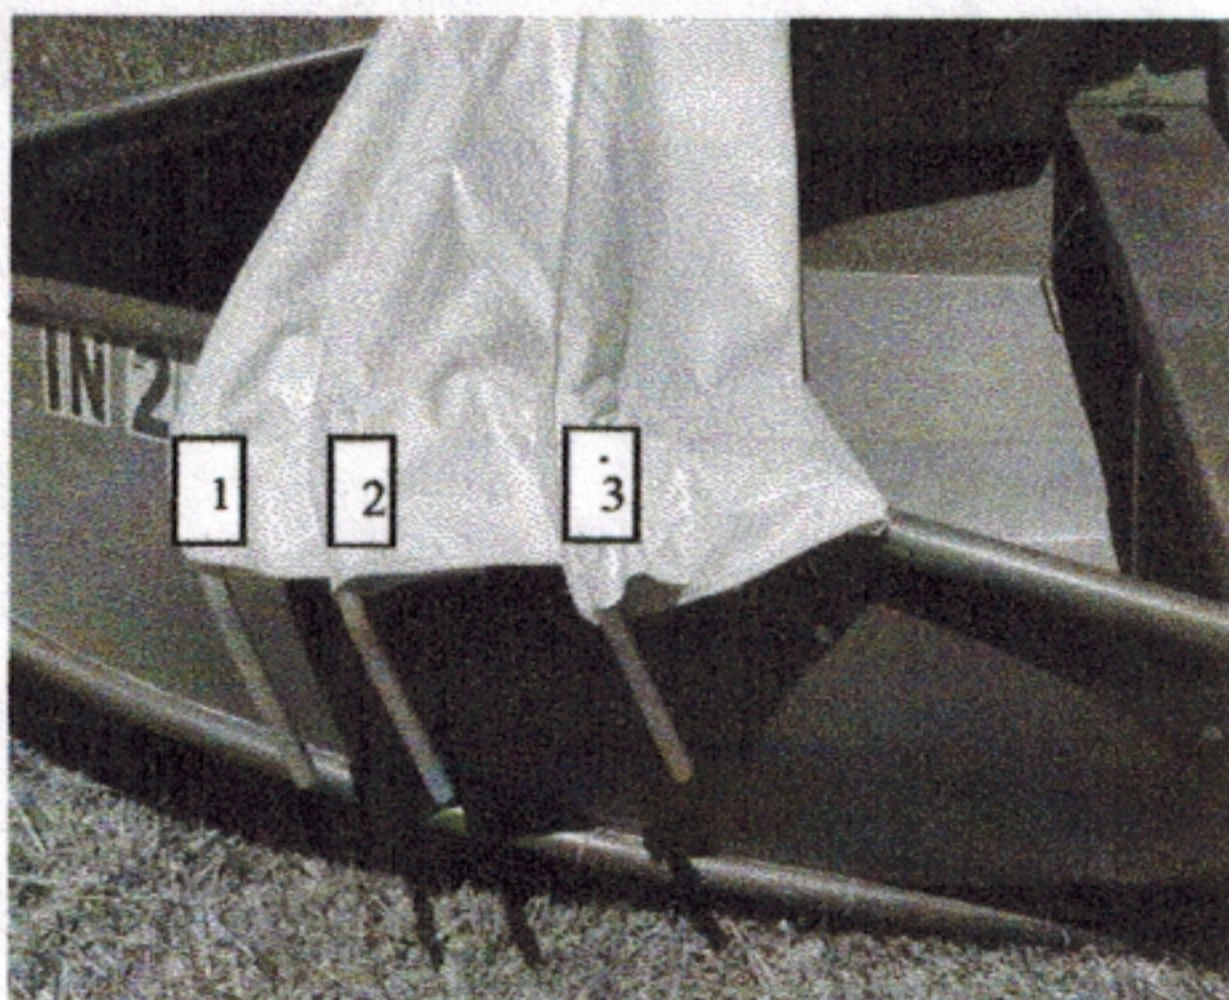


Open your boat and insert the seats. Lay the canopy on the bow of the boat as shown. Have the two closer curved tubes, #1 and #2, toward the front of the boat.

If lowered forward, the white straps can be unclipped, wrapped around the SunShade and snapped back to a front seat's leg. If lowered toward the back of the boat, the Bungee cord can be unclipped, wrapped around the SunShade and snapped back to a rear seat's leg.

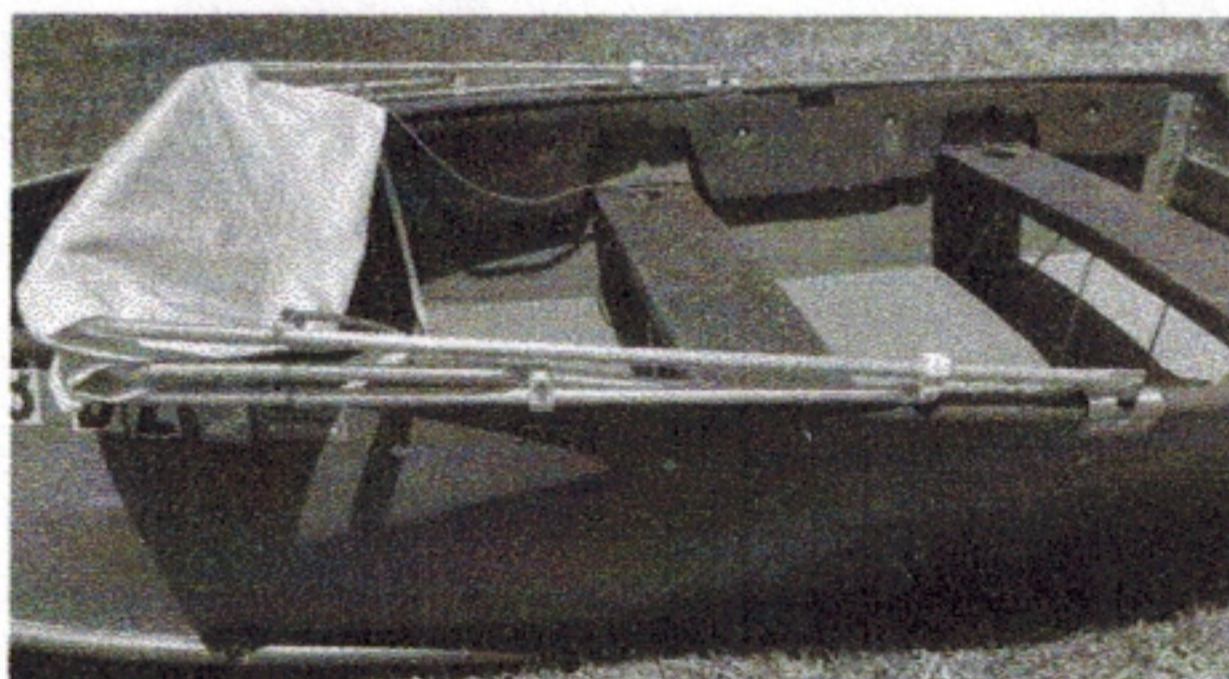

Insert the middle length support tube into the front canopy tube, #1. Insert the shortest support tube into the middle tube, #2. Insert the

longest support tube into rear canopy tube, #3.

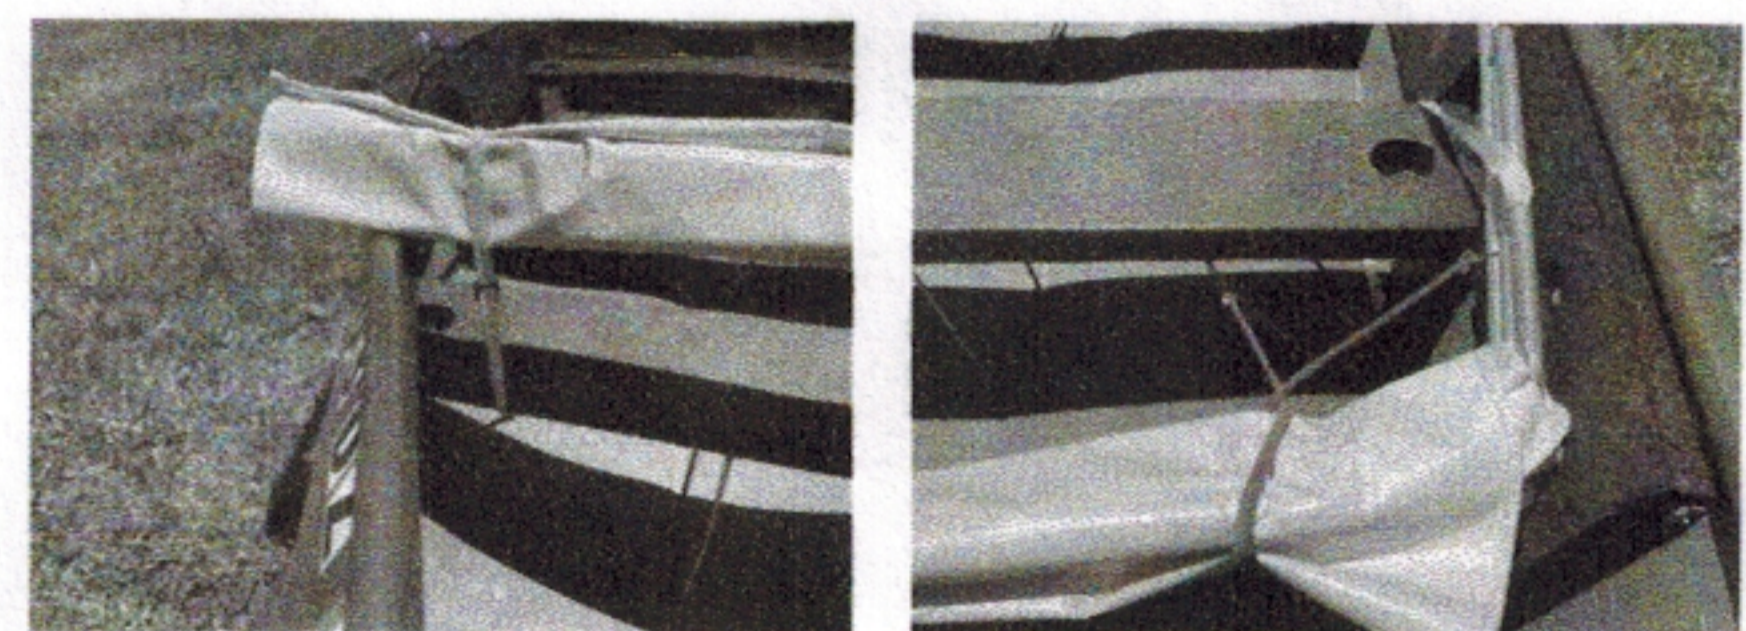

On the gunnel, align the gunnel clamp with the back of the middle seat and push the clamp down into place.

Email: ogilders@sbcglobal.net
 Or, phone: 1 - (650) 283-5398 USA Eastern Time
 Or, web:
 Porta-Sunshade - Porta-Bote International (portabote.com)
 Or, write: Porta-Bote International
 8118 Arroyo Circle,
 Gilroy, CA 95020.