



Installing Your New Back Saver SEAT®

1- The Bottom of the seat has 4 bolts. Place the swivel base against the seat bottom so all 4 bolts can be inserted into the corresponding holes of the swivel base. Insert a nut onto each bolt. Tighten each nut with pliers or wrench. *Done.*

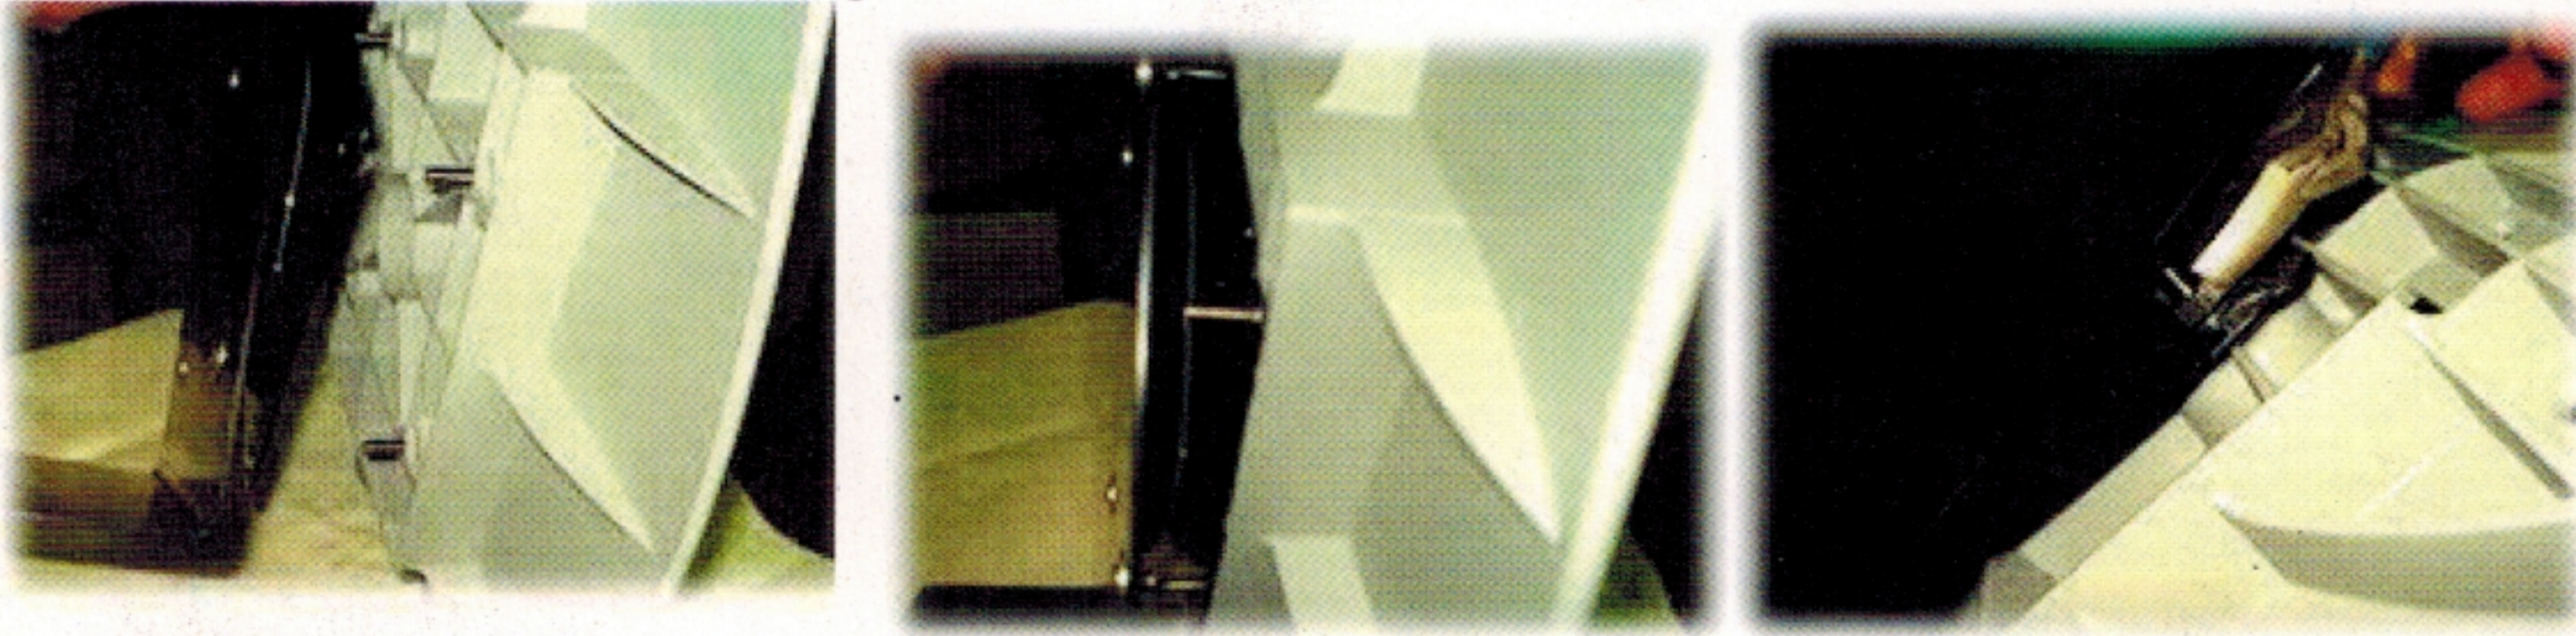

2- Place the seat with the attached swivel base on top of any Porta-Bote cross seat as shown below - as *close* to the *CENTER* of the cross seat as possible.
3- Insert threaded safety bolt through swivel base hole facing the front of boat.

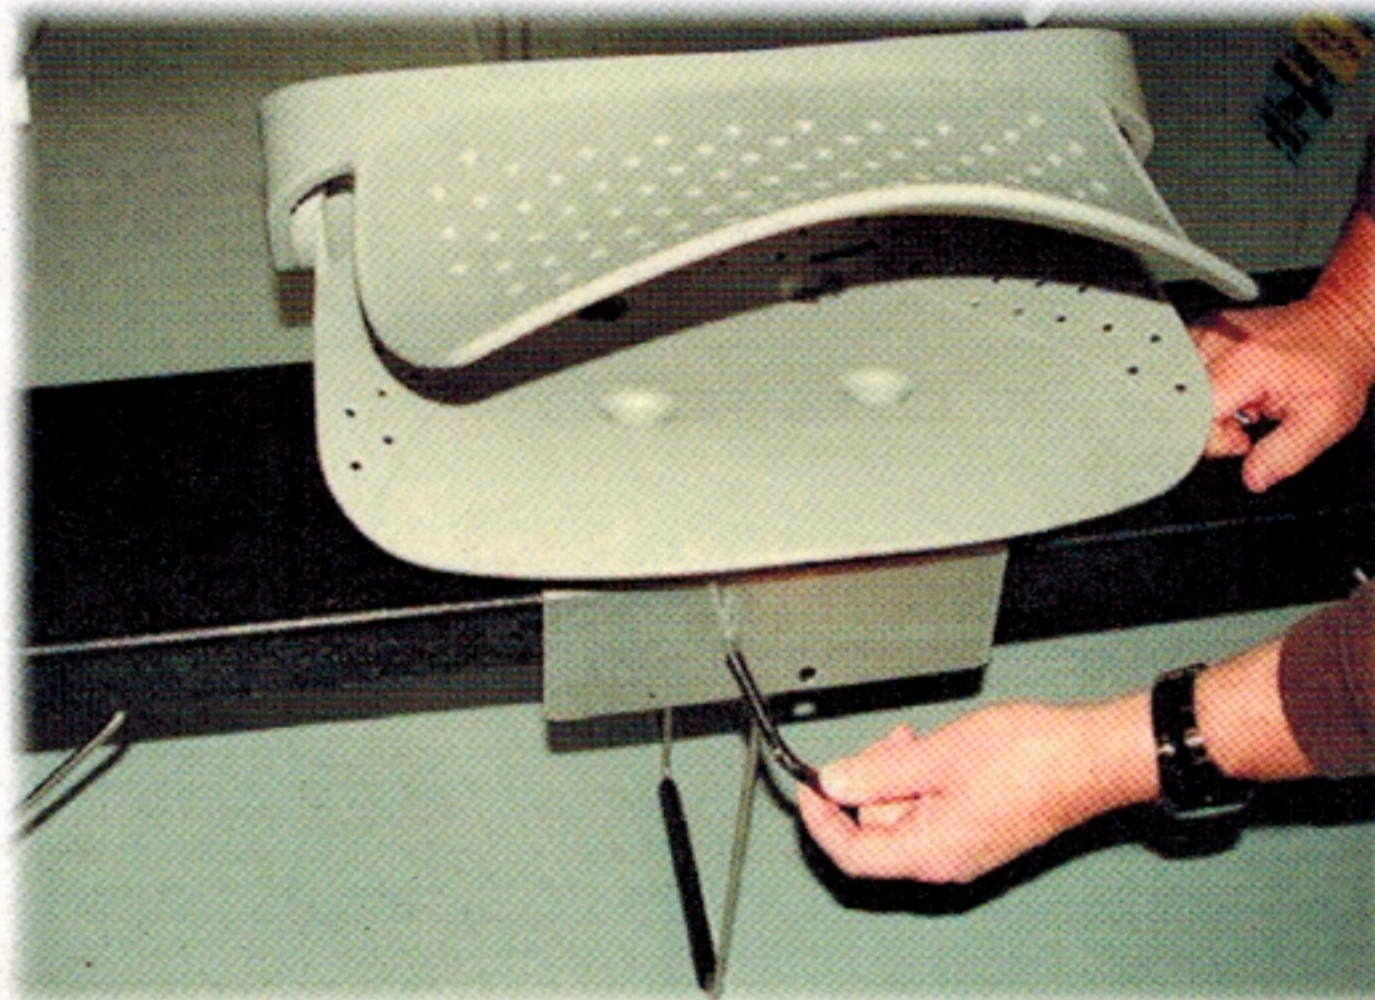

IMPORTANT NOTE:

- A-** If your Porta-Bote cross seats have "GROOVES" or "FOAM FLOTATION" on top, insert the safety bolt through the **LOWER** hole.
- B-** If your Porta-Bote cross seats have no grooves or foam on top, these are the new "Super Seats". Insert the safety bolt through the **UPPER** hole.



4- Insert the threaded safety bolt through the appropriate rear hole and hand tighten the wingnut **TIGHT**.

Push the **RED** locking button on the lower side of seat to open (or close) the Seat**DONE**.

Technical Questions? Call: 1(408)842-1322 - 8am - 4 pm Pacific Time Tuesday- Friday

Or: info@portabote.com

ENJOY!